



3990 Old Town Ave C-207
San Diego, CA 92110

Maintenance and Care Guide

- Do not leave the unit uncovered in a harsh environment and/or exposed to the elements. DO NOT store outdoors.
- Rustic Stands and Stations are intended to be used indoors. All Hostess Stands and Stations with laminate panels are intended for indoor use.
- Check powder and clear coating regularly for any scratches or dings which may compromise the unit's weather resistance. If you find a scratch or ding, use the applicable touch up paint ASAP.
- When transporting the unit, make sure the caster brakes are unlocked.
- Check and tighten the drawer tracks once a month to ensure proper functionality.
- When cleaning the unit, use a microfiber cloth with warm water and mild detergent if needed. Do not use any abrasive cleaners.
- Laminated panels should also be covered from direct sunlight to prevent discoloration.
- When running your LED system, make sure that the battery is not being used while the charger is plugged into an outlet. Use only one power source at a time (if applicable).
- Do not leave your battery charged for more than 12 hours at a time (if applicable).